

<b>Tool Model</b>	<b>Part NO</b>	<b>Part Code</b>	<b>Description</b>
HN90	1	HS10704	SCREW 6X38
HN90	2	HN70097	CYLINDER CAP UNIT
HN90	3	HN10773	CYLINDER CAP SEAL
HN90	4	KK23650	COMP SPRING 3650
HN90	5	HN10774	PISTON STOP
HN90	6	HH19719	O-RING 1A2.6X54.5
HN90	7	HH11157	O-RING ARP568-136 850006
HN90	8	HN10776	HEAD VALVE PISTON
HN90	9	HN10777	HEAD VALVE GUIEDE
HN90	10	HH14729	O-RING AS568-144
HN90	11	HH11806	O-RING P27
HN90	12	HN70087	MAIN PISTON UNIT
HN90	13	HN10780	CYLINDER SEAL
HN90	14	HH19200	O-RING 1A 2.6 X 52.5 <<<<<
HN90	15	HH11109	O-RING 1AP40 <<<<<
HN90	16	HN81126	CYLINDER A (HN10778 replaced)
HN90	17	HH19196	O-RING 1A 4.9X43 851439
HN90	18	HN10779	CYLINDER B
HN90	19	HN10807	BUMPER
HN90	20	HN81061	EXHAUST COVER UNIT
HN90	21	HS10078	FILTER B
HN90	22	HS10077	FILTER A
HN90	23	HN81062	FRAME UNIT
HN90	24	CN34309	PLASTIC SHEET LABEL (100421)
HN90	25	HN10810	NAME LABEL A
HN90	26	HN10811	NAME LABEL B
HN90	27	KK23507	SPRING 3507
HN90	28	HN12123	TRIGGER LOCK DIAL
HN90	29	FF21235	SPRING PIN 3X30
HN90	30	HH11120	O-RING ARP568-009 CN65079
HN90	31	HN10775	PIPE
HN90	32	HH19127	O-RING A 1.5X5.5
HN90	33	HN10379	GRIP COVER
HN90	34	CN35075	TRIGGER LOCK LEVER
HN90	35	HN10857	PROTECTOR M
HN90	36	TA17024	FILTER A
HN90	37	HH19102	O-RING 1A 2.4X31.8 T29011(REPLACES TA15265)
HN90	38	HN12037	END CAP
HN90	39	HN10316	END PLUG CAP
HN90	40	HN70264	AIR PLUG H-FPM (TT05425 replaced)
HN90	41	HN10017	PILOT VALVE
HN90	42	BB40470	SCREW 5X32
HN90	43	HN10019	TRIGGER VALVE CAP
HN90	44	HN10820	FEED NOZZLE
HN90	45	HH19722	O-RING A1.5X5
HN90	46	HN10043	PILOT CAP
HN90	47	HN10018	PILOT SEAL
HN90	48	HH12105	O-RING 1A 1.5X12.8
HN90	49	HN10016	TRIGGER VALVE HOUSING
HN90	50	HN10353	TRIGGER VALVE STEM
HN90	51	HH11208	O-RING P6 (HH11804 replaced)

Tool Model	Part NO	Part Code	Description
HN90	52	HS10139	PILOT VALVE
HN90	53	HH11132	O-RING 1AP10A CN65072
HN90	54	KK23906	COMPRESSION SPRING 3906
HN90	55	KK23619	COMP. SPRING 3619
HN90	56	HH19707	O-RING A1.4X2.5
HN90	57	HS10141	TRIGGER VALVE STEM
HN90	58	HH19214	O-RING 1B 1.5X3
HN90	59	HS10140	TRIGGER VALVE CAP
HN90	60	HN10100	CONTACT LVER
HN90	61	KN12635	CONTACT LEVER B
HN90	62	HS10143	CONTACT LEVER A
HN90	63	KN12401	TRIGGER
HN90	64	FF22402	SPRING PIN 3X16 (LIGHT LOAD)
HN90	65	HN10786	ARM GUIDE PLATE
HN90	66	KK33300	SPRING 3300
HN90	67	HS10146	SWITCH LEVER B
HN90	68	CN34500	SPRING, LEVER
HN90	69	KK23735	COMPRESSION SPRING 3735
HN90	70	KK23736	COMPRESSION SPRING 3736
HN90	71	KK23129	COMPRESSION SPRING 3129
HN90	72	HN10784	ARM GUIDE
HN90	73	HN10785	CONTACT BUMPER
HN90	74	HN10818	CONTACT ARM A
HN90	75	HN10026	ADJUST DIAL
HN90	76	HN11981	ADJUST SPACER
HN90	77	HH14734	O-RING AS568-031
HN90	78	HN11773	NOZE
HN90	79	EE39602	WASHER 7
HN90	80	BB40224	SCREW 7X25
HN90	81	CN33679	DOOR LATCH
HN90	82	KK33353	TORSION SPRING 3353
HN90	83	FF41599	PIN 1599 (REPLACES FF41587)
HN90	84	HN10796	DOOR
HN90	85	FF41817	STEP PIN 1817
HN90	86	HN10797	RATCHET
HN90	87	KK23912	COMPRESSION SPRING 3912
HN90	88	EE39609	RUBBER WASHER 1.8X6X2
HN90	89	FF31520	STRAIGHT PIN 1520
HN90	90	BB40460	BOLT 5 X 28
HN90	91	HN10790	CONTACT BOLT
HN90	92	HH11903	O-RING 1A 1.2 X 4 T29051(REPLACES TA15277)
HN90	93	KK23952	COMPRESSION SPRING 3901 (KK23901 replaced)
HN90	94	HN70091	CONTACT ARM B UNIT
HN90	95	JJ10404	E-RING 3.2
HN90	96	HN10817	CONTACT TIP
HN90	97	FF31294	PARALLEL PIN 1294
HN90	98	CN35336	CHECK PAWL
HN90	99	KK33337	TORSION SPRING 3337
HN90	100	HN10830	FEED PAWL (USA) (HN10795 replaced)
HN90	101	KK23710	COMP. SPRING 3710
HN90	102	KK23788	COMP. SPRING 3788

Tool Model	Part NO	Part Code	Description
HN90	103	FF42216	STEP PIN 2216
HN90	104	HN10808	ARM COVER
HN90	105	CC00401	ELASTIC STOP NUT M5
HN90	106	HH11111	O-RING 1AP 14 N5522(REPLACES TA15260)
HN90	107	HN10463	FEED PISTON
HN90	108	HH11107	O-RING AP18
HN90	109	KK23926	COMP.SPRING 3926
HN90	110	KK23927	COMPRESSION SPRING 3927
HN90	111	CN37528	FEED PISTON STOP
HN90	112	HN10464	COMP. SPRING
HN90	113	JJ22407	C-RING 26
HN90	114	CN37383	SPRING HOOK (CN30602 replaced)
HN90	115	KK13144	SPRING 3144 (SUPERCEDES KK13040)
HN90	116	CN30601	SPACER CN65091
HN90	117	FF41287	PIN 1287
HN90	118	HN11982	MAGAZINE (HN10822 replaced)
HN90	119	HN10357	CONTACT BUMPER
HN90	120	HN10478	NAIL SUPPORT
HN90	121	CN37428	POST CAP
HN90	122	HN10400	ARM GUIDE PIN
HN90	123	HN10401	CONTACT ARM A
HN90	124	HN10853	MAGAZINE CAP
HN90	125	HS10118	TRIGGER
HN90	126	HS10117	CONTACT ARM A GUIDE
HN90	127	HN10851	WARNING LABEL
HN90	128	HN81072	MAGAZINE CAP ASSY
HN90	129	HN81043	MAGAZINE ASSY
HN90	130	HN10809	DUST COVER
HN90	131	BB40427	T-BOLT 4 X 8(REPLACES TA15544)
HN90	132	EE39172	WASHER 5.1X12X1.2
HN90	133	CN31083	HOOK, DUST COVER
HN90	134	HS10145	SWITCH LEVER A
HN90	135	HN10067	SCREW 6 X35
HN90	145	HN10783	PROTECTOR
HN90	146	HN10819	EXHAUST COVER
HN90	147	TA81014	STEP PIN KIT
HN90	148	EE39609	RUBBER WASHER 1.8X6X2
HN90	149	FF41842	PIN 1842
HN90	200	HN81068	ARM GUIDE KIT
HN90	201	HS80007	TRIGGER VALVE KIT
HN90	202	HN81069	SEQUENTIAL TRIP KIT
HN90	203	HN81070	O-RING KIT
HN90	204	HN81071	FRAME HANGER KIT