


SpeedFlex®


TTG

INSTALLATION INSTRUCTIONS


SpeedFlex® Track Top Gasket for J-Runners
(Part No. TTG250J, TTG400J, TTG600J)

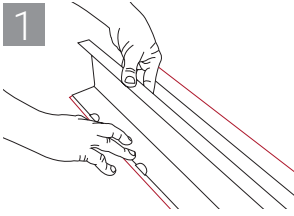


1
Bend scored edges of TTG to conform to J-track profile with printed side facing out. Place TTG on end of J Track as shown. Punched tabs to overlap long leg of track.

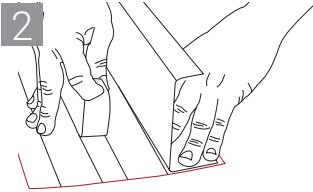


2
Optionally, secure TTG to the center of the top of J-track with integral peel and stick adhesive strip.

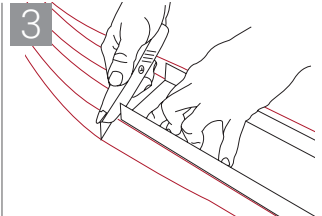

3
Lay track flat and cut TTG along other end of track.

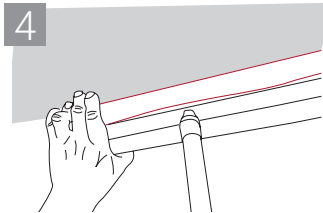

4
Fasten track to floor/ceiling in the normal manner.

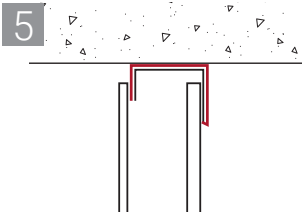

5
Verify that downward projecting flaps are sandwiched between gypsum board and track.

Page 1 of 1

Warranty: www.stifirestop.com/legal/warranty

Made in USA • Printed in USA

ZIS1077 2548



FIRESTOP
SPECIFIED TECHNOLOGIES INC.

Specified Technologies Inc.

Somerville, NJ 08876 USA

T: (800) 992-1180 • F: (908) 526-9623

www.stifirestop.com

